


Installation Information

RIPS[®] E502 SMALL ANGLE ROTARY SENSOR


INTRINSICALLY SAFE FOR HAZARDOUS DUST ATMOSPHERES

| ATEX Qualified to Intrinsic Safety Standard Certificate number Sira 00ATEX2076X | | | Ex II 1GD EEx ia IIC T4 (Ta = -40°C to +80°C) Ex iaD 20 T135°C (Ta = -40°C to +80°C) | | |
|--|-----------------------------------|----------------------|--|------------------|--------------------|
| Electronics Option | Output Description: | Supply Voltage: (Vs) | Output: | Load resistance: | Load connected to: |
| A | Voltage (ratiometric with supply) | 5±0.5V | 0.5 to 4.5V | 2kΩ min | 0V |


Connector pin layout:

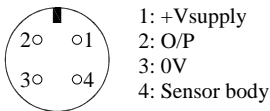

Conductor Identification:

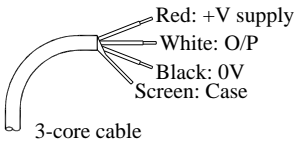

Output Characteristic - Standard

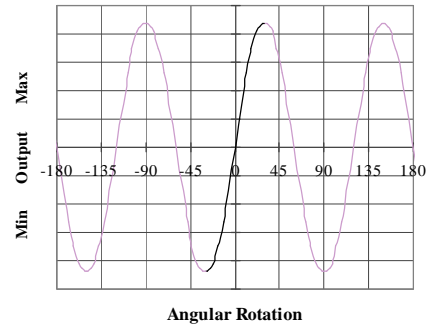

Putting Into Service: The sensor must be used with a galvanic isolation barrier designed to supply the sensor with a nominal 5V and to transmit the sensor output to a safe area. The barrier parameters must not exceed:-

- U_i = 11.4V I_i = 0.20A P_i = 0.51W
- C_i = 1.36µF* L_i = 710µH* (Lxx option)
- C_i = 1.16µF L_i = 50µH (J option)

*Figures for 1km cable where: C_i = 200pF/m & L_i = 660nH/m

The sensor is certified to be used with up to 1000m of cable, cable characteristics must not exceed:-

- Capacitance: ≤ 200 pF/m for max. total of: 200 nF
- Inductance: ≤ 660 nH/m for max. total of: 660 µH

The performance of the sensor may be affected by voltage drops associated with long cable lengths; For cable lengths exceeding 10 metres a five wire connection is recommended to eliminate errors introduced by cable resistance and associated temperature coefficients.

Use: The sensor is designed to measure Rotary displacement and provide an analogue output signal.

Assembly and Dismantling: The unit is not to be serviced or dismantled and re-assembled by the user.

Maintenance: accumulated dust layer must not exceed a depth of 50mm.

Mechanical Mounting: Flange mounted or servo mount, with appropriate clips, options. The flange slots are 4.5mm by 30 degrees wide on a 48mm pitch. The sensor should be mounted with minimal axial and radial loading on the shaft for optimum life. It is recommended that the shaft is coupled to the drive using a flexible coupling.

Tests indicate that life in excess of 16 million cycles can be achieved with 1kg side and end load.

Output Characteristic: The sensor has full rotational freedom and six sectors, 60° apart, over which linear response can be achieved. At the mid point of the calibrated range the output signal will be half full scale deflection, and the flat on the shaft is aligned with the registration mark in the base of the sensor. In the calibrated range the output increases as the shaft is rotated in an anti-clockwise direction viewed from the shaft. The calibrated output is factory set to be between 5 and 20°.

N.b. sensors supplied with cable, the free end must be appropriately terminated.

Warning - the connector on 'J' coded sensors can be rotated for purposes of convenient orientation of the connector and cable, however rotating the connector more than one complete revolution is not recommended. Repeated rotation of the connector will lead to damage to the internal wiring.

Incorrect Connection Protection levels: Not protected – the sensor is not protected against either reverse polarity or over-voltage. The risk of damage should be minimal where the supply current is limited to less than 50mA.