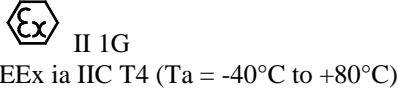


Installation Information


LIPS® X112 GAUGE HEAD POSITION SENSOR

INTRINSICALLY SAFE FOR HAZARDOUS GAS/VAPOUR ATMOSPHERES


ATEX Qualified to Intrinsic Safety Standard Certificate number Sira 00ATEX2076X

Output Description:	Barrier Supply Voltage:	Barrier Output:	
Voltage (BX002)	20-35V dc	0.5 to 9.5V	
Current Loop (BX003)	20-35V dc	4-20mA	


Connector pin layout:

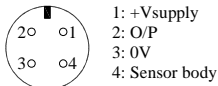

Conductor Identification:

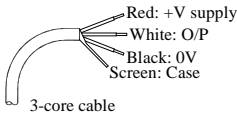

Output Characteristic - Standard

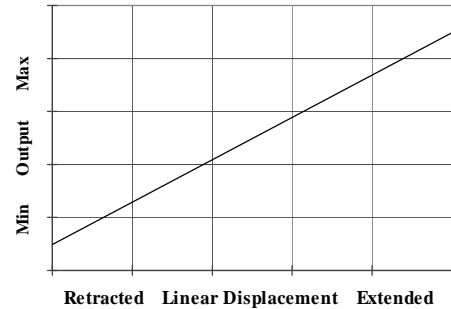

Putting Into Service:

The sensor must be used with a galvanically isolated three port barrier designed to supply the sensor with a nominal 5V and to transmit the buffered output to a safe area. Various Barrier output versions are available. The barrier parameters must not exceed:

U_i = 11.4V I_i = 0.20A P_i = 0.51W

C_i = 1.16µF with connector, **C_i** = 1.36µF with 1000m of cable. **L_i** = 50µH with connector, **L_i** = 710µH with 1000m of cable.

The sensor is certified to be used with up to **1000m** of cable with parameters not exceeding:-

Capacitance = 200 nF total, Inductance = 660µH total

The performance of the sensor may be affected by voltage drops in long cables; these can be eliminated by using a 5 wire connection. The typical supply current is 10mA and the sensor output is ratiometric to the supply voltage at the sensor.

Use: The sensor is designed to measure Linear displacement and provide an analogue output signal.

Assembly and Dismantling: The unit is not to be serviced or dismantled and re-assembled by the user.

Maintenance: No maintenance is required.

Mechanical Mounting:

Via 1/2"x20 UNF mounting thread, adjust sensor position and lock in place using lock nuts provided. Maximum tightening torque: 10Nm.

Output Characteristic:

Plunger is extended 3.3 mm from end of body at start of normal travel.

The output increases as the plunger extends from the sensor body, the calibrated stroke is between 10 and 50 mm.

Warning - the connector on 'J' coded sensors can be rotated for purposes of convenient orientation of the connector and cable, however rotating the connector more than one complete revolution is not recommended. Repeated rotation of the connector will lead to damage to the internal wiring.

Incorrect Connection Protection levels:-

Not protected – the sensor is **not** protected against either reverse polarity or over-voltage. The risk of damage should be minimal where the supply current is limited to less than 50mA.